

PARTS

- A. Magwell Body
- B. Magazine Insert
- C. Set Screw
- D. Flat Head Screw
- E. Hex Wrench

ASSEMBLY

Please follow these steps to install the Magwell Extension:


1. Use the Hex Wrench [E] to thread the set screw [C] all the way into the larger threaded hole on the curved surface of the Magazine Insert [B] until it is flush or below.

2. Install the Magazine Insert [B] into the grip cavity of your frame.

3. Hook the inside edge of the taller front section of the Magwell Body [A] on to the "toe" on the front of your frame and rock it backwards to encapsulate the frame and Magazine Insert [B] then press firmly.

4. Fasten the Magwell Body [A] to the Magazine Insert [B] through the countersink in the angled section toward the rear of the Magwell Body using the Flat Head Screw [D] and Hex Wrench [E].

5. Use the Hex Wrench [E] and back out the Set Screw [C] until it is flush with the backstrap of the frame

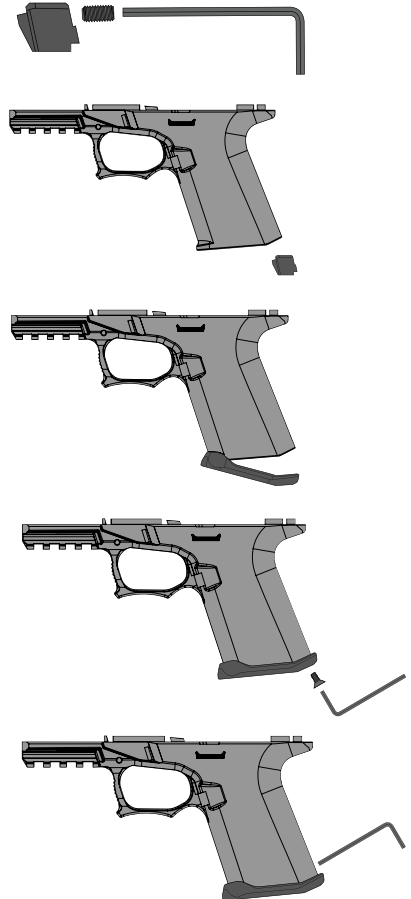

FOR ADDITIONAL HELP CONTACT US

(508) 834-4223 | 5DTACTICAL.COM

